## Slide - Out Control Panel

Intellitec's Slide-Out Controller is designed to control the operation of a slide-out room electrical mechanism. The controller automatically stops the slide-out when it reaches it's inner, or outer limit by sensing the current drawn by the motor. This eliminates the need for the owner to hold the switch in the "ON" position for the entire extend/retract cycle, and the installation of the limit switches and associated wiring during installation is also eliminated.

The Intellitec Room Control is an all inclusive control with separate IN, OUT and STOP buttons. To operate the room, the owner would simply press the "OUT" button and the slide will move out. When the slide-out reaches it's outermost limit, the unit will sense the rise in current and switch off the power to the slide-out motor.

To move the room back in again, the owner will push the "IN" button and the room will move in. When the slide out reaches it's innermost position, the controller will sense the rise in current and will shut off power to the motor. If at any time during the operation of the slide-out, the owner wants to stop the room, he can push the "STOP" button and it will stop. Pressing either of the buttons will again start the room sliding in the direction designated by the switch pushed.



Part Number: 00-00705-000

When the unit is not being used, the unit dynamically breaks the motor by connecting both motor leads to ground. It also is unable to be activated as the circuitry receives no power unless the switch is activated, dismissing any possibility of an errant motor start.



P/N 53-00705-000 Rev. B 030805

## Slide - Out Control Panel

## Specifications:

**Operating Voltage:** 


10 to 16 VDC

Current carry capabilities: Continuous current: Stall Current Threshold: Standby current draw:

25 Amps 13 to 34 Amps <1 milliamps

Operating Temperature: Operating Environment: -40°C to +85°C (-40°F to +185°F) Protected from direct weather

## Typical Wiring Diagram:

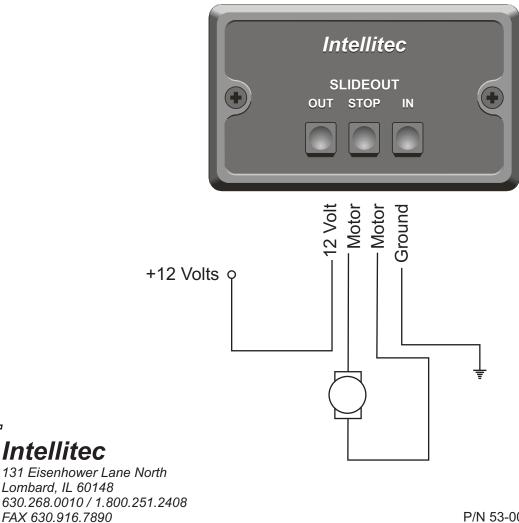

P/N 53-00705-000 Rev. B 030805